




# Fujifilm Finepix F10 6.3 MP LCD Replacement

Install a new LCD to replace an old or broken one.

Written By: Sarah Looper

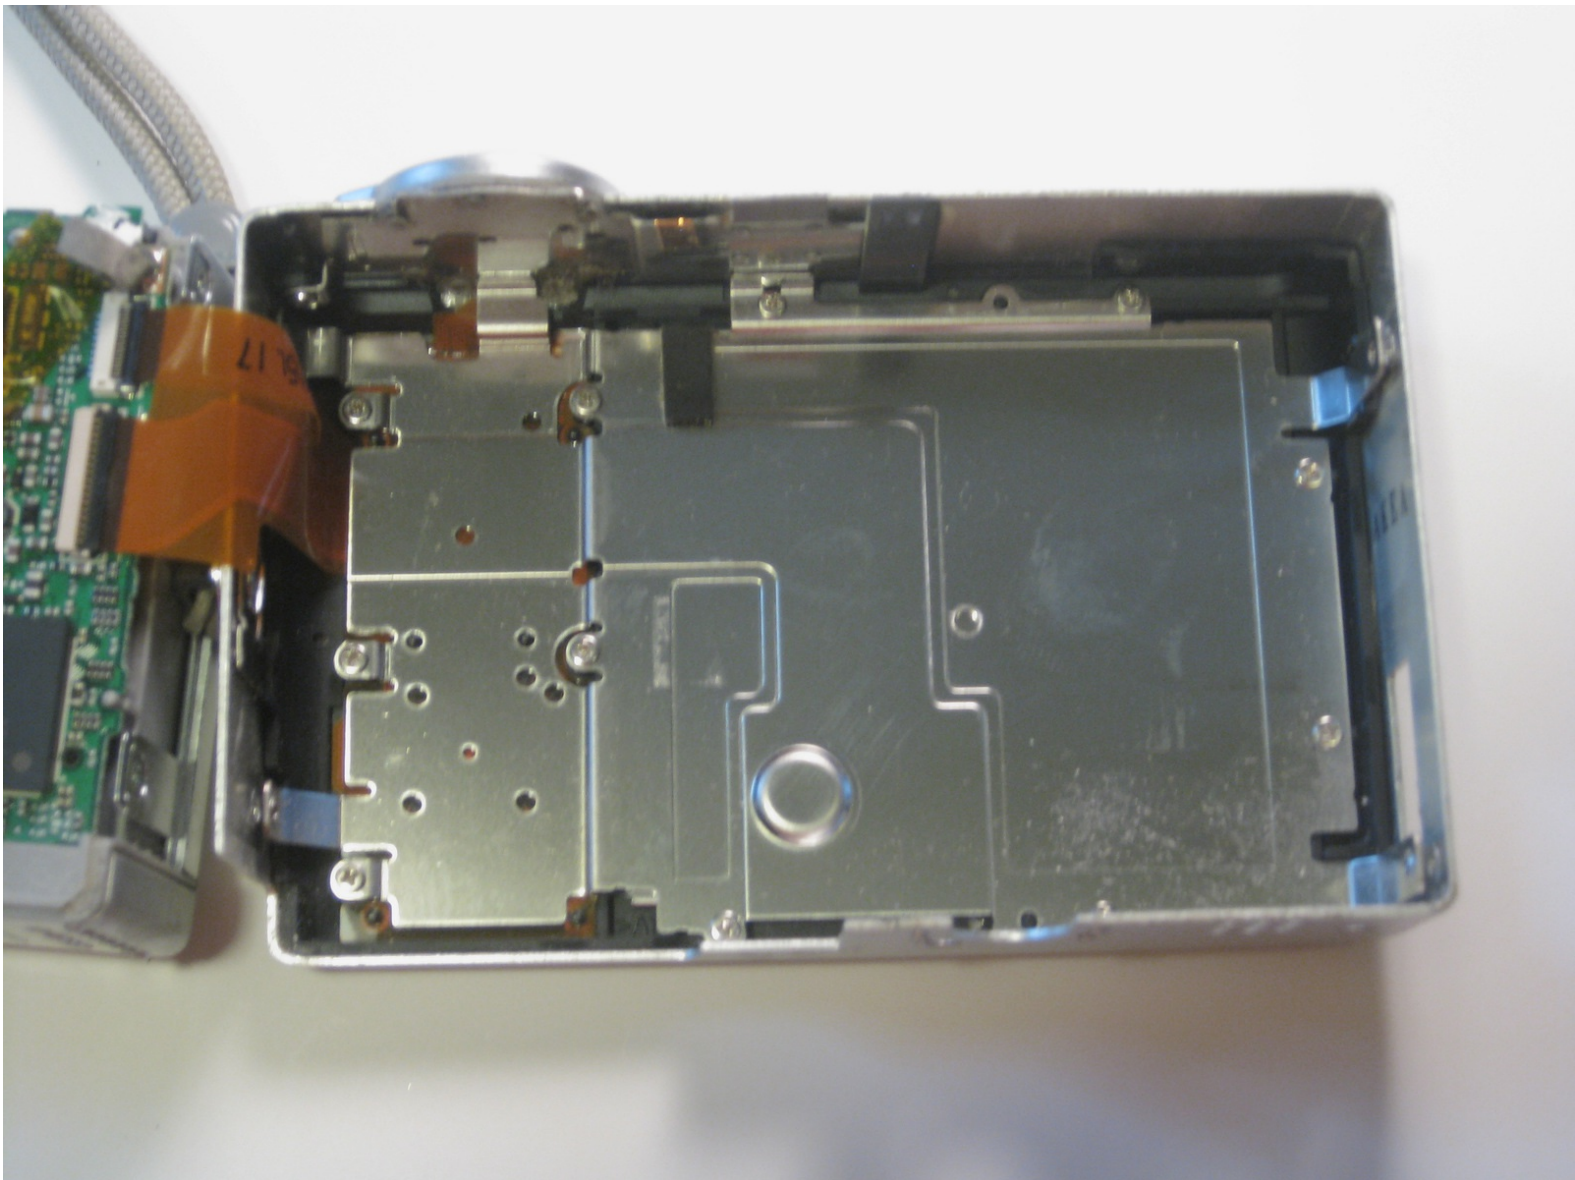

## INTRODUCTION

A guide on how to take out the many screws located on the inside, metal cover and how to install an LCD.



### TOOLS:

- [Heavy-Duty Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tri-wing Screwdriver](#) (1)



### PARTS:

- [Back Cover](#) (1)

## Step 1 — Back Cover



- Remove the screws from the bottom of the camera using the tri-wing screwdriver.
- Three 5.4 mm tri-head screws.


## Step 2



- Remove screws from charger side of camera using the Phillips 00 screwdriver.
- Two 3.3 mm Phillips #00 screws.






## Step 3

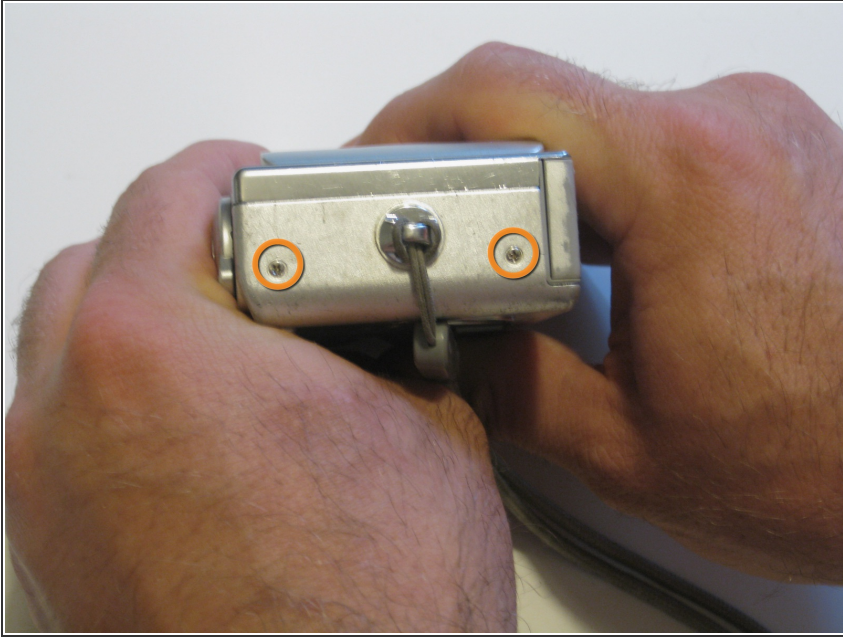


- Remove screws from wrist-strap side of camera using the Phillips 00 screwdriver.
- Two 3.3 mm Phillips #00 screws.

## Step 4

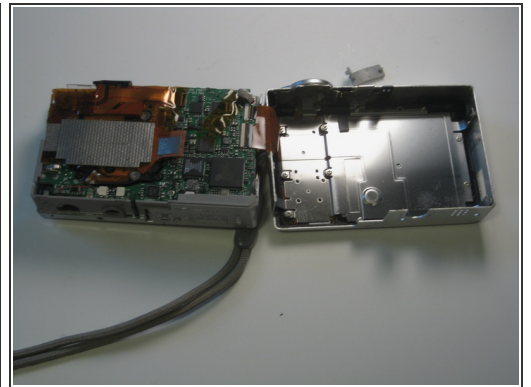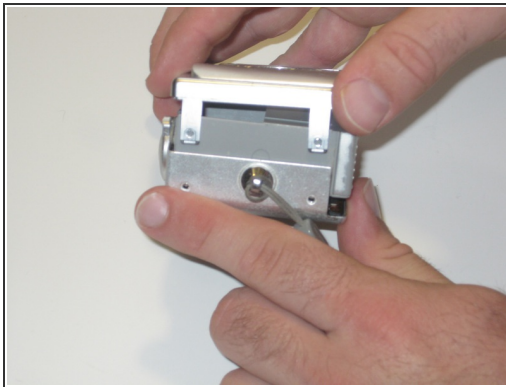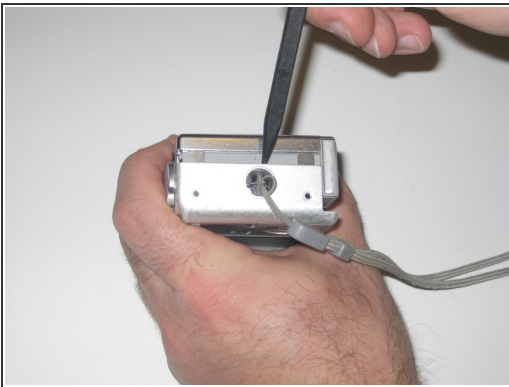


- Separate the front and back casing using the spudger.
- Gently pull apart the two casings.
- Pull the back casing away from the camera.

## Step 5 — LCD

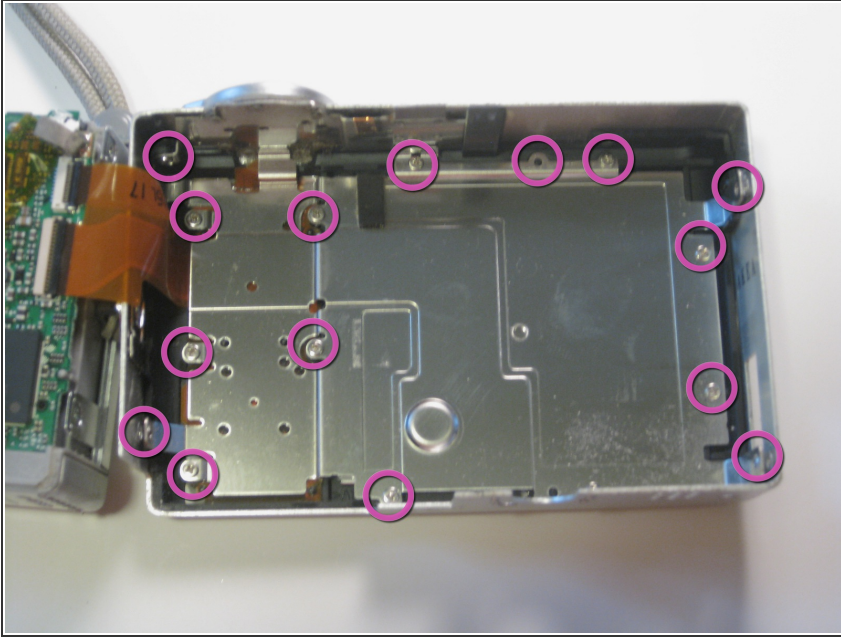



- Remove screws from the casing covering the LCD using the Phillips 00 screwdriver.
- Remove the fifteen 2.9 mm Phillips #00 screws.

## Step 6

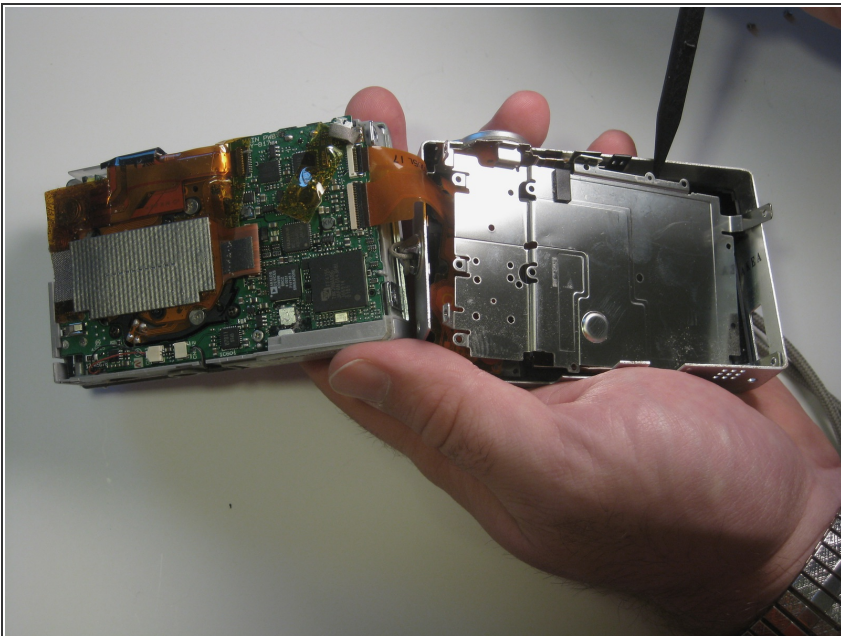

- Slide casing out using the spudger.

## Step 7

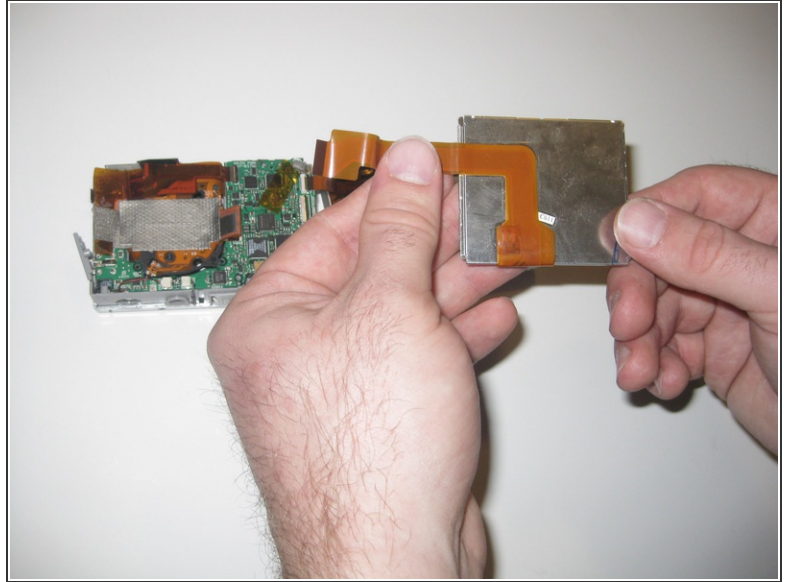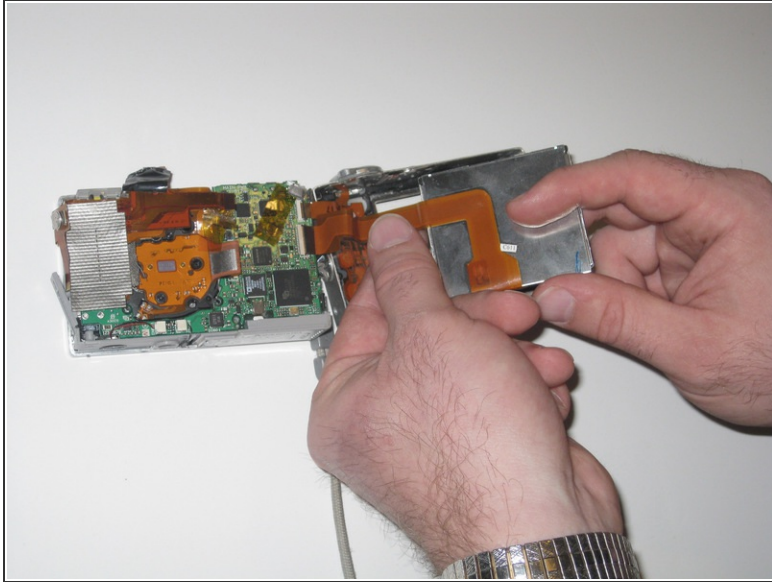

- Gently remove the LCD display data cable by gripping the end that is connected to the motherboard and pulling out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 08:07:06 PM.